COOKTOP PARTS

For Model: IJP85801
(White)

30" ELECTRIC RANGE
CERAN COOKTOP

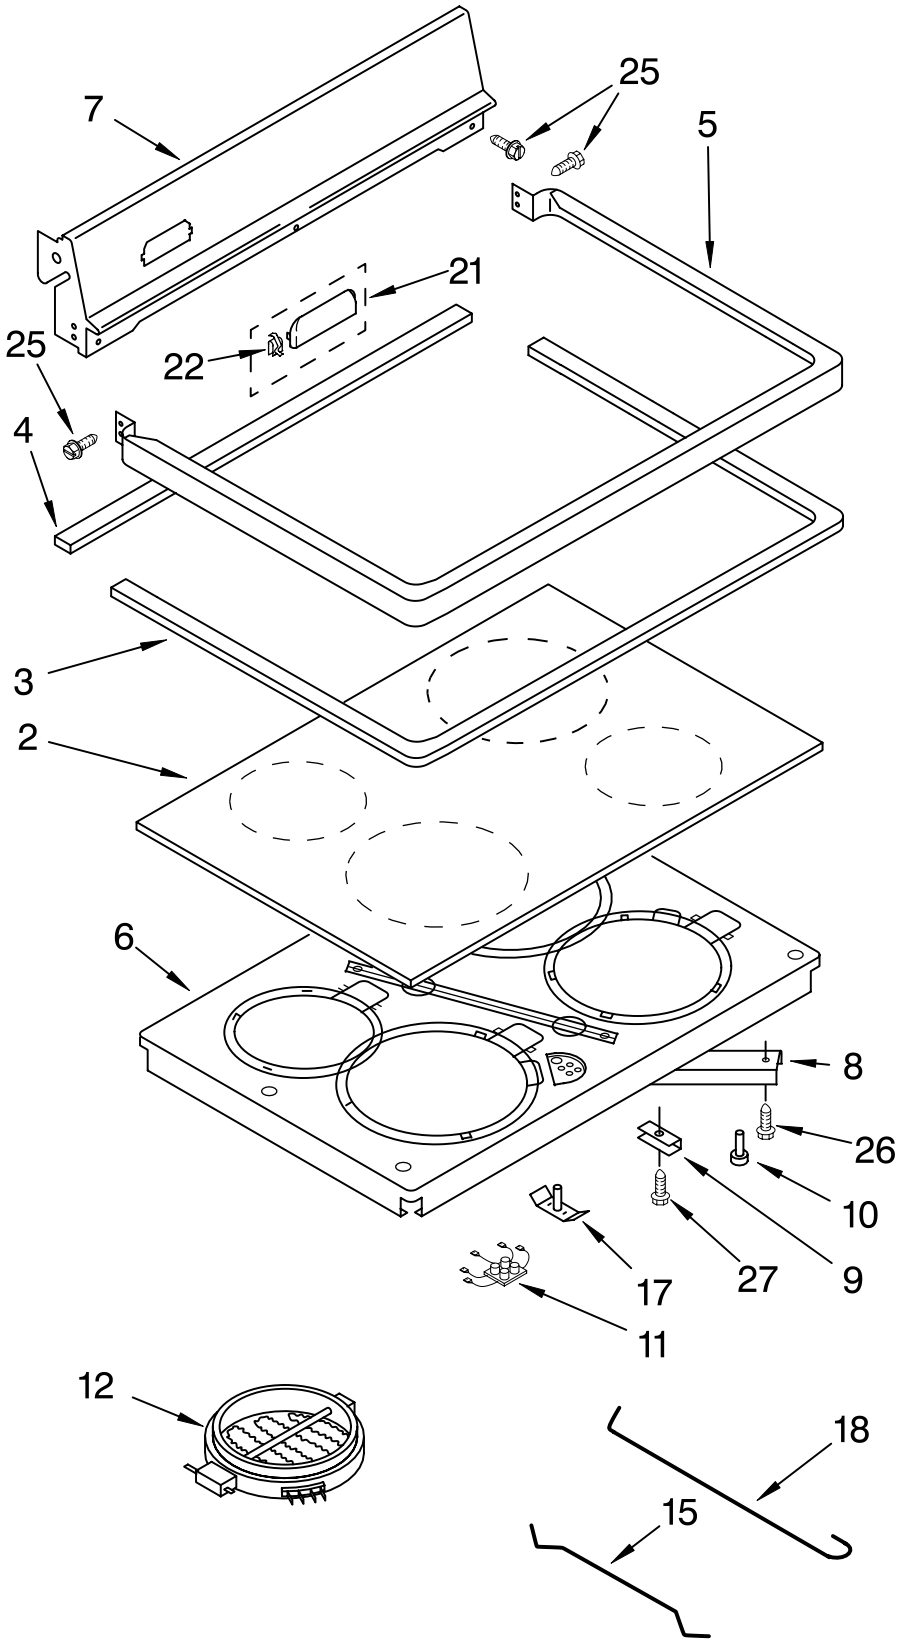

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9752777	Installation Instructions
	LIT9752776	Template, Anti−Tip
	LIT9754170	Use & Care Guide
	LIT9782237	Wiring Diagram
	LIT9781875	Service Instructions
2	9754255CW	Cooktop, Ceran
3	9780939	Gasket, Cooktop Front & Sides
4	9781614	Gasket, Rear
5	9750456PW	Frame, Cooktop
6	9753941	Support, Element
7	9752337GW	Back Splash
8	9753675	Brace, Support
9	9753691	Clip, Support (4)
10	9750969	Bumper (4)
11	9781935	Hot Light
12		Element, Surface
	8272564	1500W − LR
	8272563	1000/2400W − LF
	9753999	Bridge Element
	9754274	Warm Zone
15	9781460	Rod, Small (2) Ceran Element
17	9781235	Speed Nut (2)
18	9781459	Rod, Large (2) Ceran Element
21	9753040CW	Cover Vent
22	3149190	Clip, Mounting
	9753677	Spring, Warm Zone
25	3149333	Screw, 10−16 x 1/2
26	9780272	Screw, 10−16 x 1/2
27	423248	Screw, 10−16 x 3/4

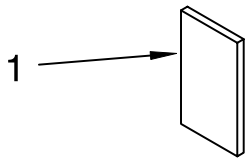

Literature Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: IJP85801
(White)

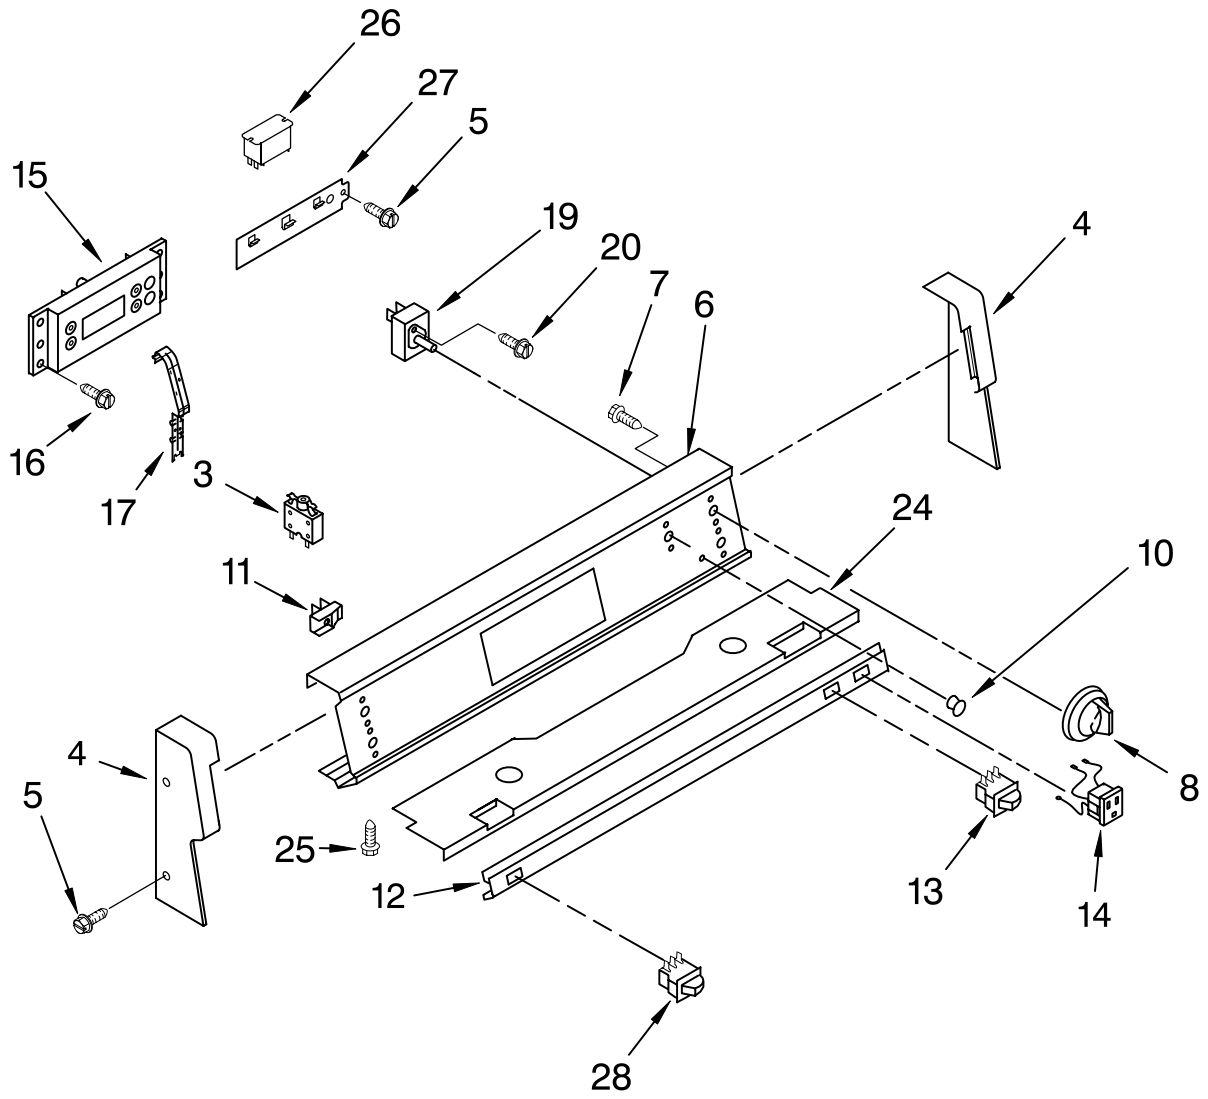

Illus. No.	Part No.	DESCRIPTION
3	3191073	Breaker, 15 Amp
4		End Cap
	9752422FW	Left
	9752423FW	Right
5	9780265	Screw, 10−16 x 3/8
6	9754234	Panel, Control
7	9780852	Screw, 8−18 x 3/8
8	9750272FW	Knob, Control
10	9752589	Lens, Indicator

Illus. No.	Part No.	DESCRIPTION
11	313102	Light, Indicator
12	9752442PW	Trim Strip
13	3191100FW	Switch, Oven Light
14	9751480FW	Outlet, Untimed
15	9753438	Timer
16	9780272	Screw, 10−16 x 1/2
17	9781754	Bracket, Timer

Illus. No.	Part No.	DESCRIPTION
19		Switch, Infinite
	9750638	1500W
	9750639	1800W
	9755173	Dual, (2)
20	3400816	Screw, 3−32 x 3/16
24	9752439	Base, Console
25	3196168	Screw, 8−18 x 1/2
26	9752759	Relay, DPST
27	3191039	Support, Relay
28	9753692FW	Switch, Rocker (Illuminated)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: IJP85801
(White)

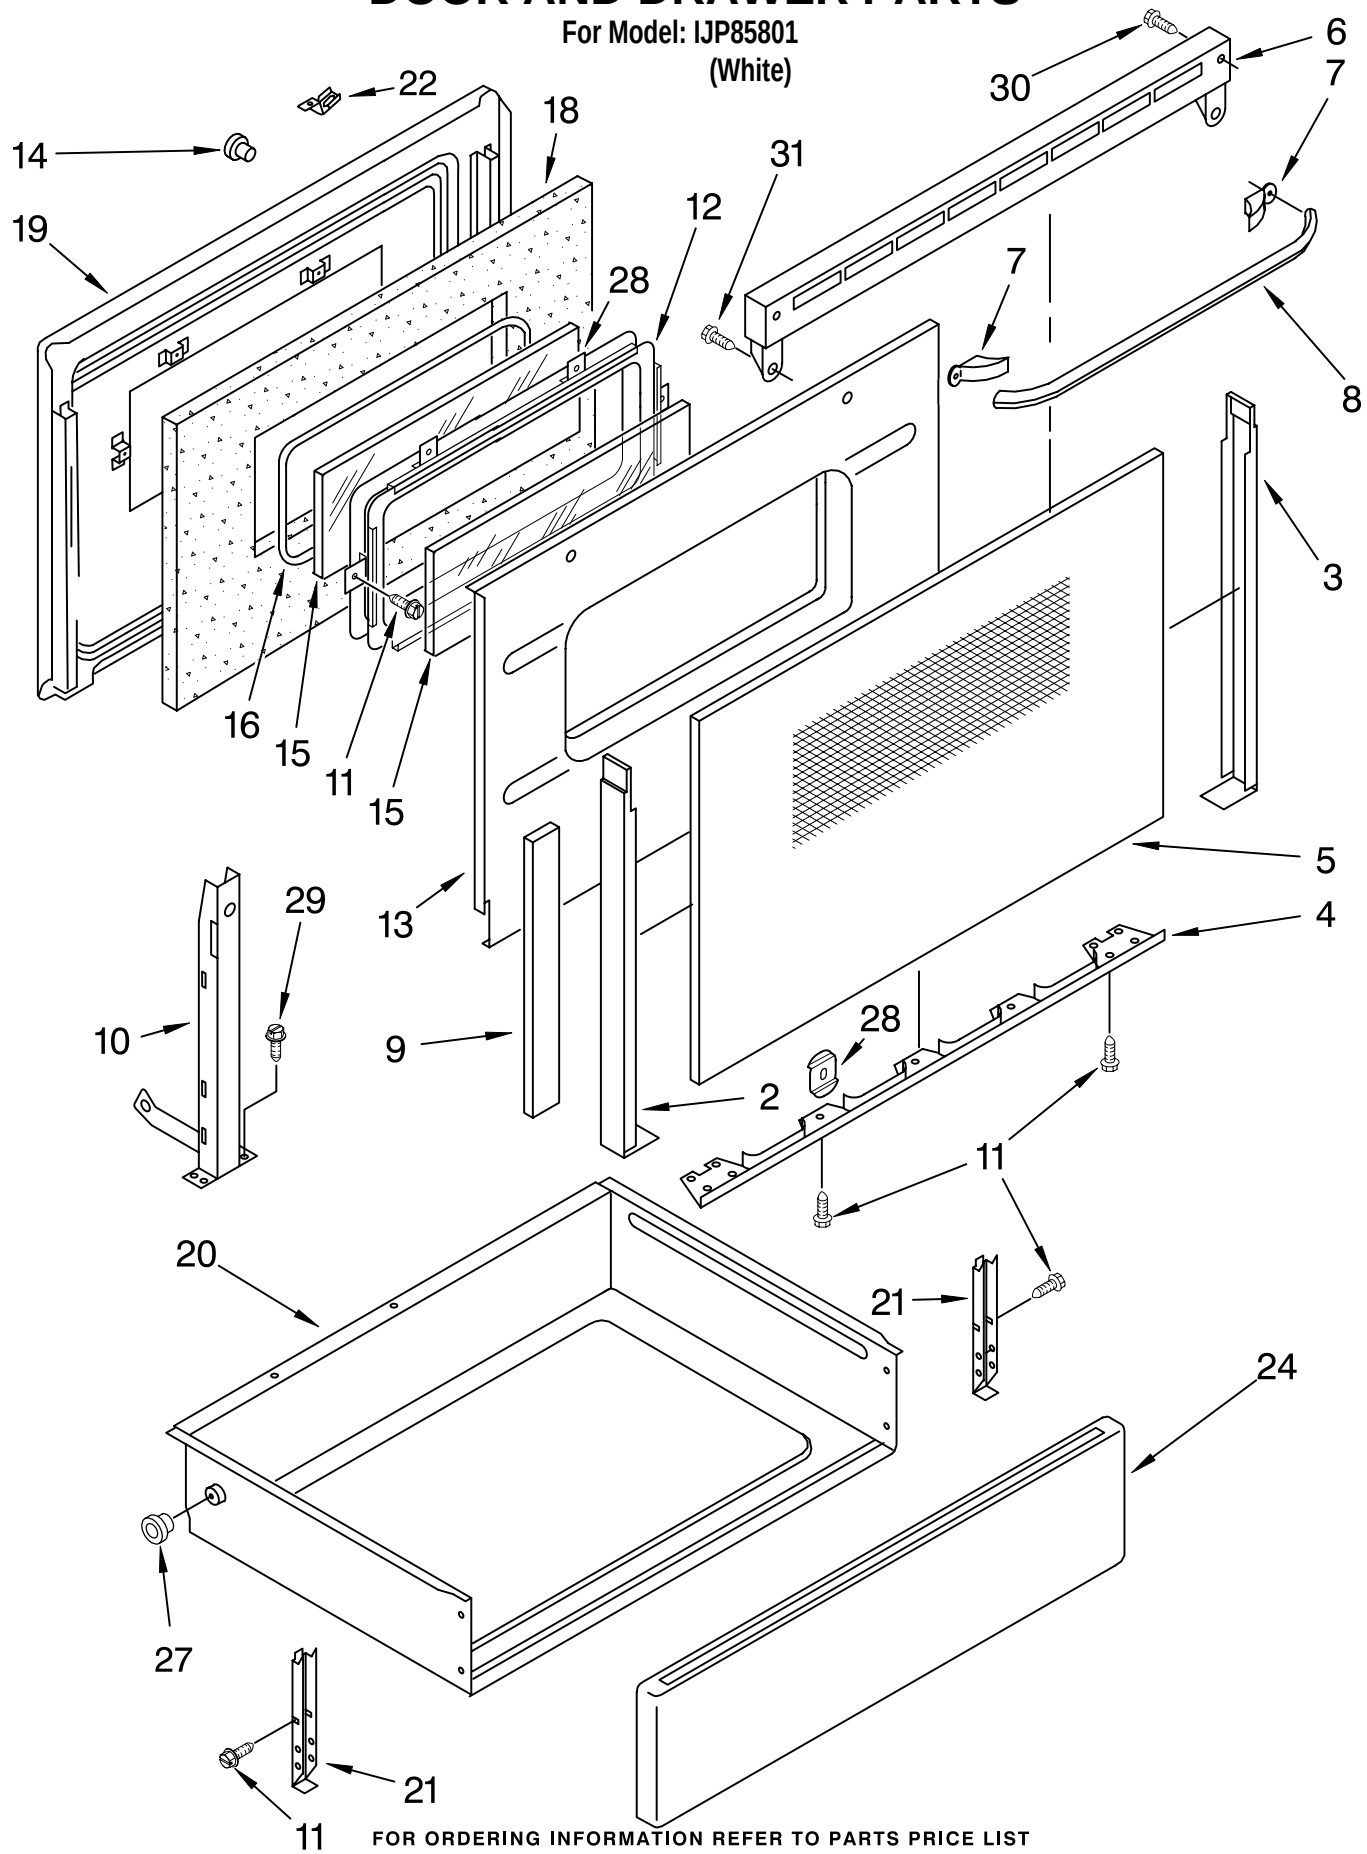

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: IJP85801
(White)

Illus. No.	Part No.	DESCRIPTION
2	9782003PW	Trim, Door−Left
3	9782004PW	Trim, Door−Right
4	9781209PW	Trim, Door Bottom
5	9781781PW	Glass, Door
6	9753498GW	Vent, Door
	9781659	Gasket
7	9781575	Endcap, Handle (2)
8	9751690PW	Handle, Door−White
9	9781449	Gasket, Door Glass
10	9782033	Hinge, Door R or L
11	9780265	Screw, 10−16 x 3/8
12	9781601	Frame, Glass
13	9781588	Shield Door
14	9780771	Bumper, Rubber
15	9781654	Glass,Pyro (2)
16	9755178	Seal, Window
18	9754007	Insulation
19	9781599GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
22	9750676	Retainer, Door (2)
24	9782108PW	Front, Drawer
27	423713	Roller, Drawer (2)
	90296	Clip
28	9781502	Spacer, Door (8)
29	9780272	Screw, 10−16 x 1/2
30	9781196	Screw,10−24 x 1.25
31	9780266	Screw, 10−24 x 5/8

OVEN CHASSIS PARTS

For Model: IJP85801
(White)

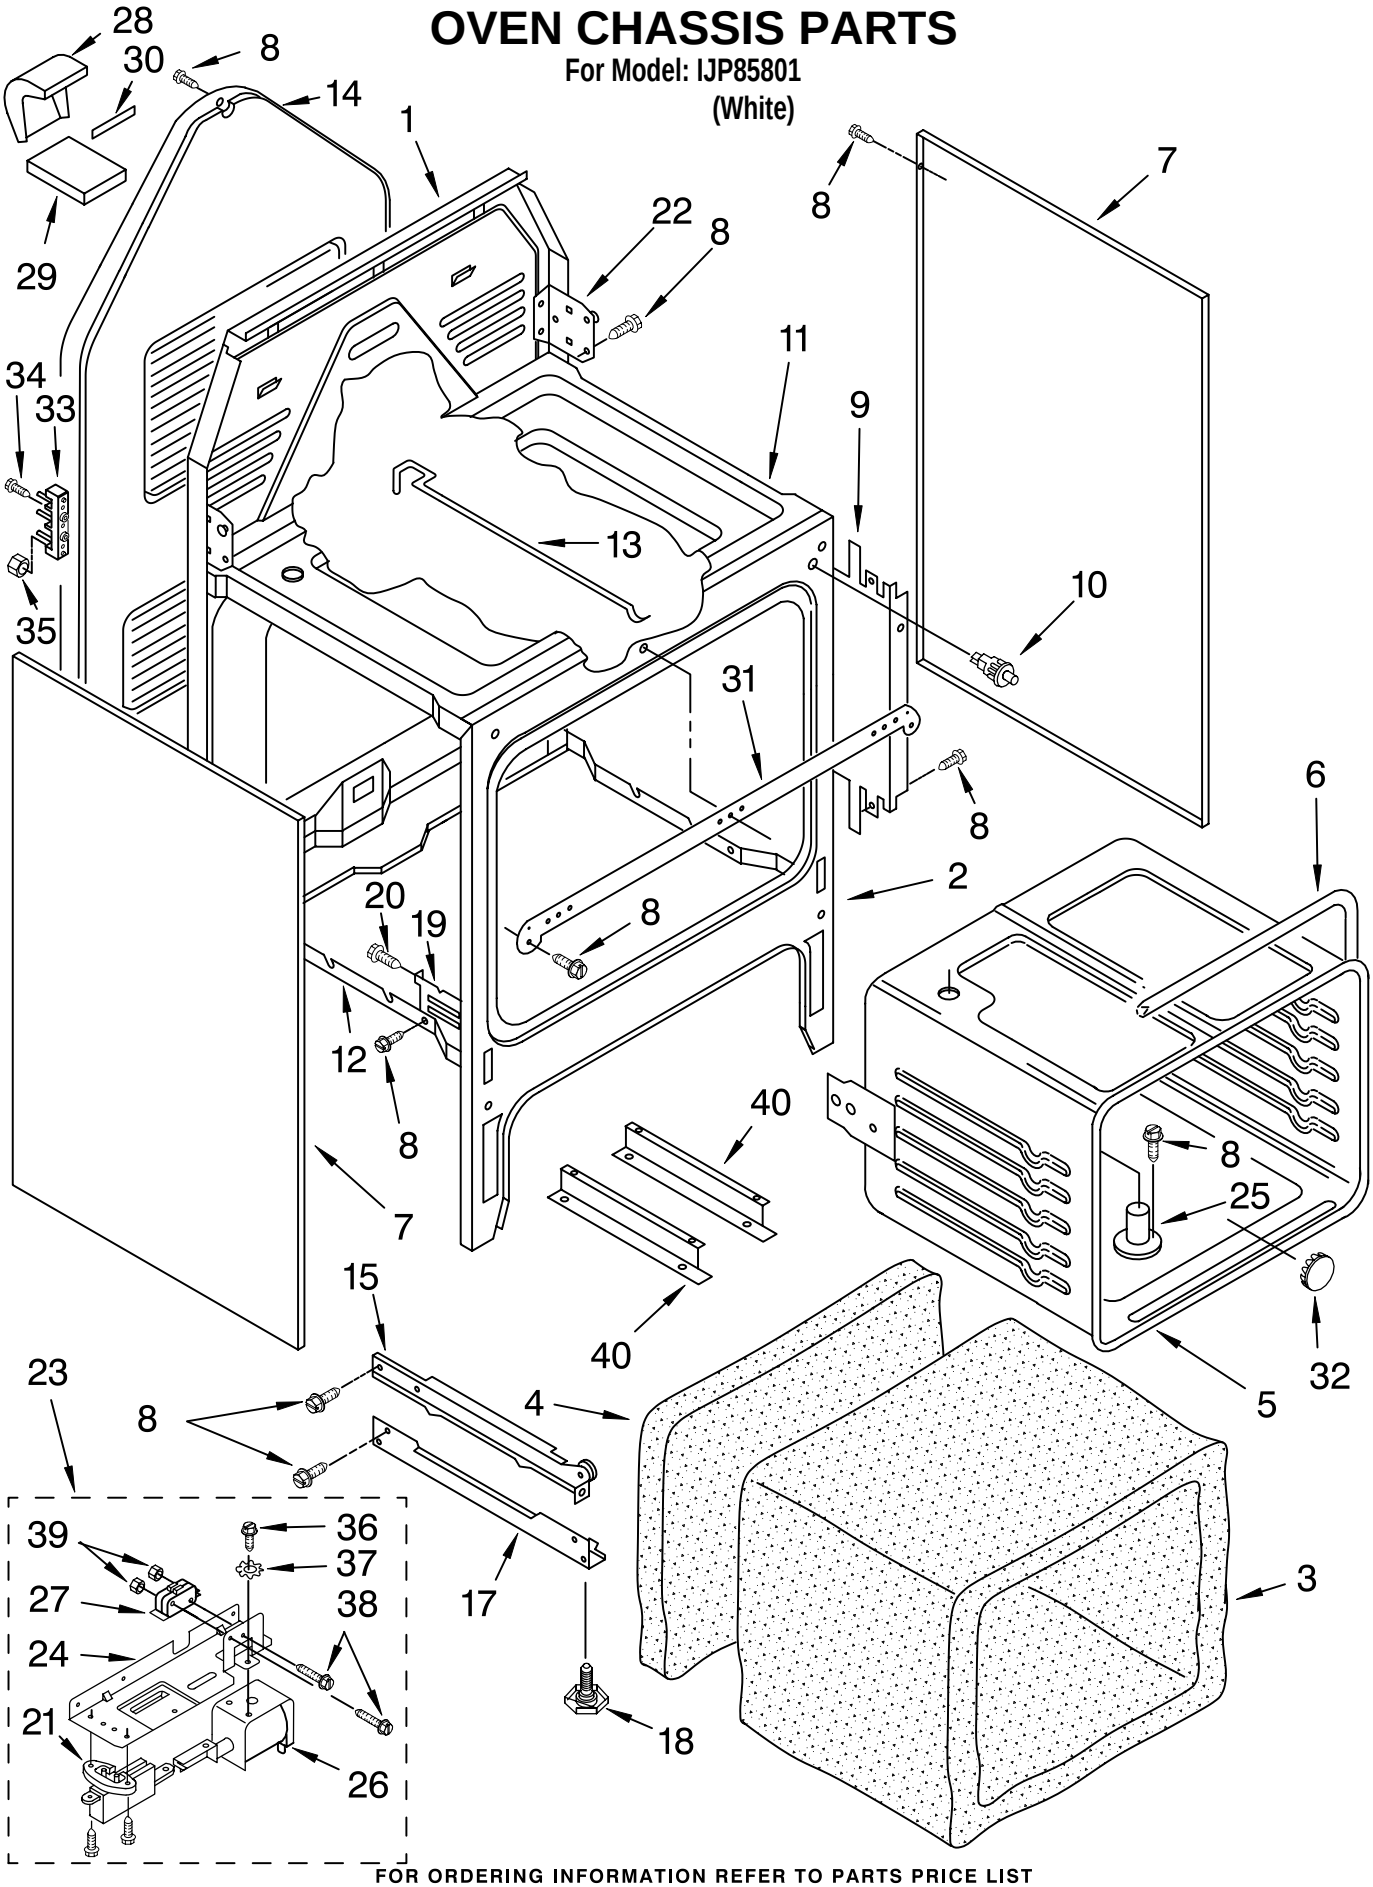

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Model: IJP85801

(White)

Illus. No.	Part No.	DESCRIPTION
1	9750146	Main Chassis, Back
2	9750514GM	Chassis, Front
3	9754000	Insulation, Wrap
4	9754011	Insulation, Rear
5	9781293GM	Oven Liner
6	9755179	Gasket Oven
7	9781907PW	Oven, Side Panel
8	9780265	Screw, 10−16 x 3/8
9	9780664	Shield, Insulation
10	9752798	Door Switch (Oven Light)
11	9750478	Burner Box
12	9750142	Oven Bottom
13	9750523	Rod, Lock
14	9750150	Panel, Rear
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9782005	Receiver, Hinge (R or L)
20	9780272	Screw, 10−16 x 1/2
21	9752462	Single Position Device (Not Serviced)
22	9750258	Hinge, Cktp.−Left
	9750416	Hinge, Cktp.−Right
23	9752404	Oven Lock Assembly
24	9750526	Bracket, Lock
25	9753091	Vent Tube
26	9752409	Solenoid
27	9750965	Switch, Interlock
28	9750394	Back, Vent
29	9750393	Cover, Vent
30	9750767	Gasket, Vent
31	9780585	Wire Guard
32	9780578	Plug, Button
33	258076	Block, Terminal
34	98884	Screw, 10−16 x 1
35	112432	Nut, #10−32 Hex
36	422222	Screw,10−32 x 5/16
37	424238	Washer, 10−32
38	9750887	Screw, 4−40 x 1
39	9750888	Nut
40	9781904	Support, Rail

OVEN PARTS

For Model: IJP85801

(White)

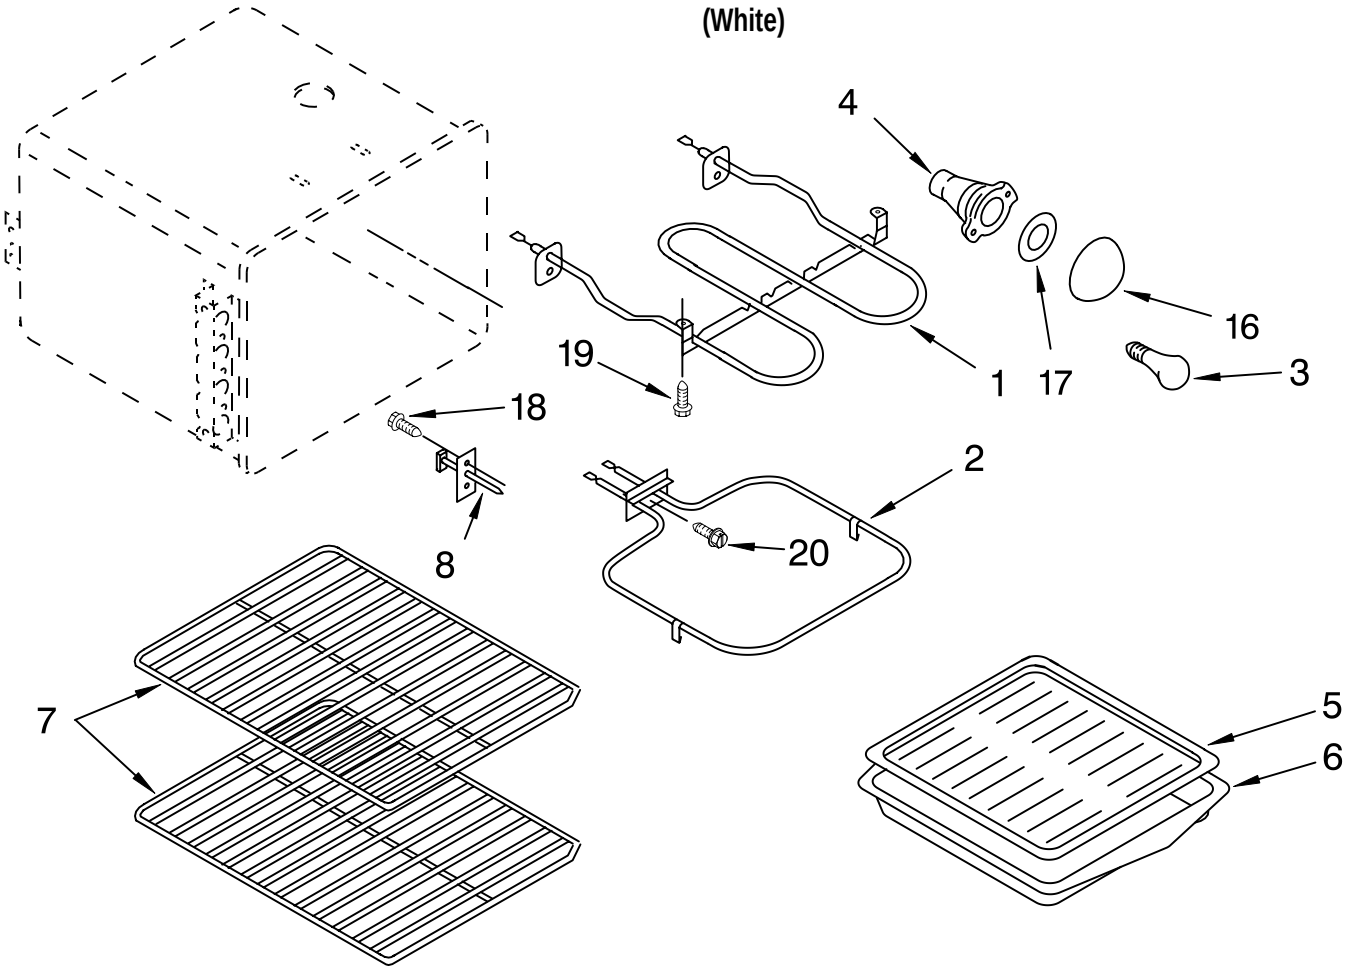

Illus. No.	Part No.	DESCRIPTION
1	9750211	Element, Broil
2	9750213	Element, Bake
3	8935	Bulb, Oven
4	9781050	Socket, Light
5	420104GM	Grill, Broiler
6	420101GM	Pan, Broiler
7	9750498	Rack, Standard (2)
8	9782081	Sensor
16	9781049	Lens Light
17	3184533	Gasket, Lens
18	9780265	Screw, 10−16 x 3/8
19	9781509	Screw, 8−32 x 3/8
20	340184	Screw, 10−16 x 1.5

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Model: IJP85801
(White)

Illus. No.	Part No.	DESCRIPTION
SPLICING WIRES−−25FT. LENGTH		
	242828	Wire, Black 12 Ga. 150°c
	242820	Wire, Black 14 Ga. 150°c
	242821	Wire, Blue 14 Ga. 150°c
	242822	Wire, Brown 14 Ga. 150°c
	242830	Wire, Brown 14 Ga. 200°c
	242823	Wire, Green 14 Ga. 150°c
	242824	Wire, Orange 14 Ga. 150°c
	242829	Wire, Red 12 Ga. 150°c
	242825	Wire, Red 14 Ga. 150°c
	242831	Wire, Red 14 Ga. 200°c
	242826	Wire, White 14 Ga. 150°c
	242827	Wire, Yellow 14 Ga. 150°c
	242832	Wire, Yellow 14 Ga. 200°c
PAINT, TOUCH−UP (1/2oz.)		
	72017	White
	72107	Almond
	511873	White Porcelain (2 Oz.)
PAINT, PRESSURIZED SPRAY (12 oz.)		
	350930	White
	350956	Almond
	285006	Superior Black
	206922	Primer (White)
PAINT, BULK (1 qt.)		
	799344	White (Uncut)
	978883	Almond (Uncut)
REFINISHING MATERIAL		
	799832	Kit, Porcelain Repair (White)
	242756	Touch−Up Self−Clean (1/2 Pt.)
	261582	Grease
	9781096	Cleaner, Cream
INSULATION		
	261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2−1/2" x 22" x 120")
	241430	Foil, Aluminum Oven (18" x 25')
WIRING HARNESS PARTS		
	9781291	Harness, Wire (Outlet)
	9782133	Harness, Wire (Main)
	9753682	Harness, Wire (Cooktop Ceran)
	9752612	Harness, Wire (Door Switch)
	9753680	Harness, Wire (Warm Zone)
	9754100	Harness, Wire (Bridge Element)
	9752771	Harness, Wire (Cooktop Control)
	9781287	Power Cord
	690989	Screw, Grounding
	9750984	Hanger, Wire
	20082084	Wire Tie